



...connecting your business

# LANCOM L-321agn Wireless

## Quick Reference Guide



Please observe the following when setting up the device


- For devices to be operated on the desktop, please attach the adhesive rubber footpads
- Do not rest any objects on top of the device





- Keep the ventilation slots on the side of the device clear of obstruction
- In case of wall mounting, use the drilling template as supplied



- Lockable wall mounting with the LANCOM Wall Mount (available as an accessory)





If you operate separately purchased antennas, please ensure that you do not exceed the maximum allowed transmission power for your system. The system operator is responsible for adhering to the threshold values. Antennas are only to be attached or changed when the device is switched off. Mounting or demounting antennas while the device switched on may cause the destruction of the WLAN module!  
US version: Antennas not part of the delivery content are a strict violation of FCC rules and must not be used.

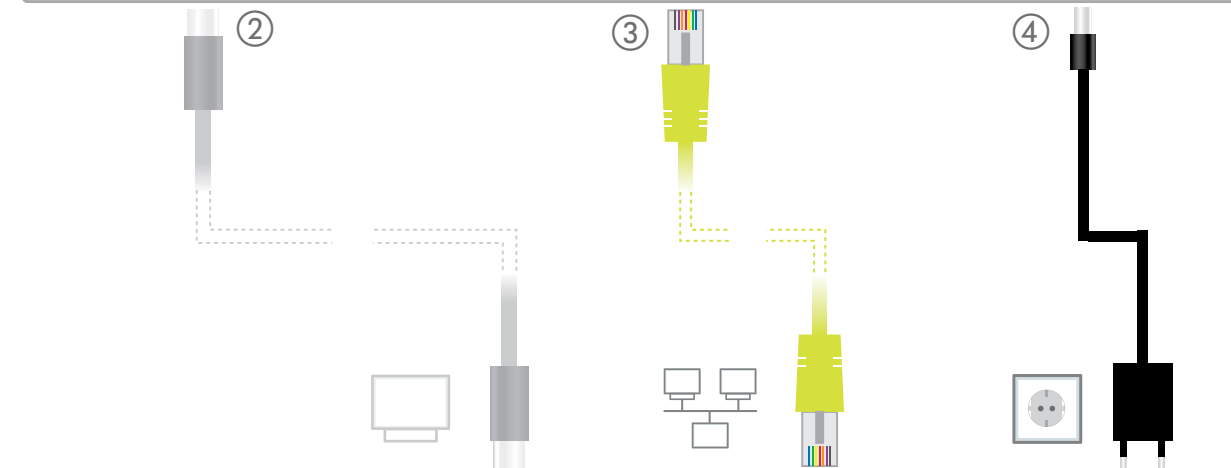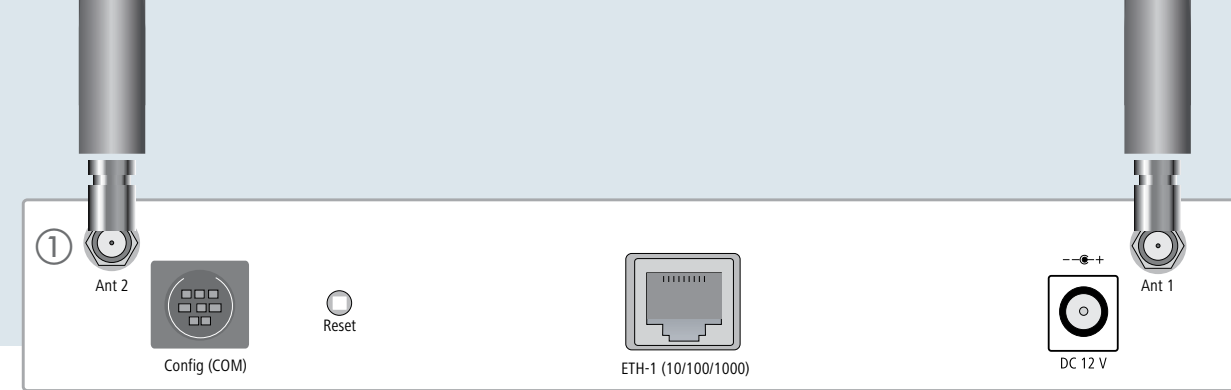

- WLAN antennas**  
Screw the WLAN antennas supplied onto the connectors Ant 1 and Ant 2. Depending on how the antennas are to be used, the 'Antenna Grouping' may need to be configured in order to ensure the desired MIMO behavior.
- Optional: Serial configuration cable**  
You can connect the device to a PC with a configuration cable (available separately).
- LAN**  
Use the cable with the kiwi-colored connectors to connect the interfaces ETH to your PC or a LAN switch.
- Power**  
When connecting the cable to the device, turn the bayonet connector 90° clockwise until it clicks into place.  
 Use only the supplied power adapter.

MOUNTING AND CONNECTING THE DEVICE

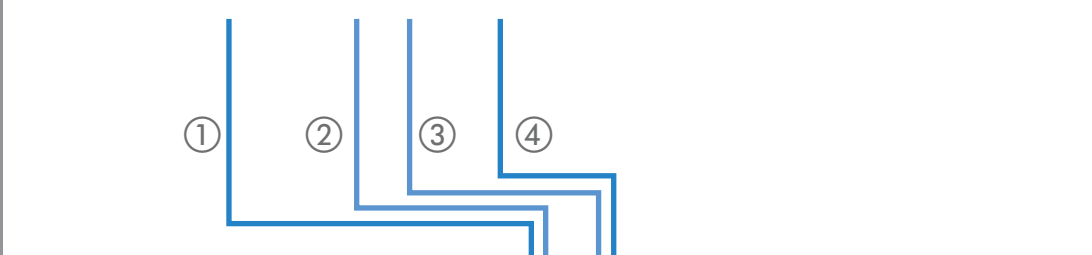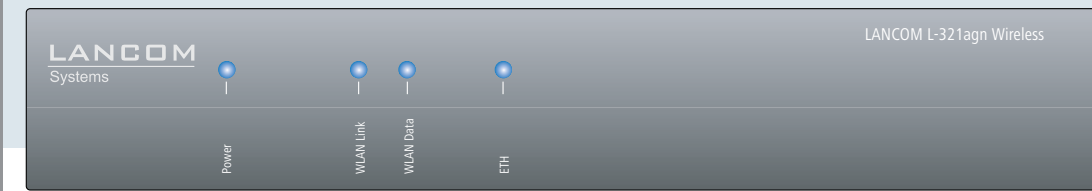

1 Power		4 WLAN Data	
Off	Device switched off	Flickering green	TX data traffic.
Green, on (permanently)	Device operational	Flickering red	Error in wireless LAN (TX error, e.g. transmission error due to a poor connection)
Blinking green	Configuration password not set. Without a configuration password, the configuration data in the device is unprotected.	Red, blinking	Hardware error in the WLAN module
2 WLAN Link		3 ETH	
Off	No WLAN network defined or WLAN module deactivated. The WLAN module is not transmitting beacons.	Off	No networking device attached
Green	At least one WLAN network is defined and WLAN module activated. The WLAN module is transmitting beacons.	Green, on (permanently)	Connection to network device operational, no data traffic
Green inverse flashing	Number of flashes = number of connected WLAN stations and P2P wireless connections, followed by a pause (default). Alternatively the frequency of the flashing can indicate signal strength over the defined P2P link or the signal strength between the access point and the device operating in client mode.	Flickering green	Data traffic
Blinking green	DFS scanning or other scan procedure.		

License information for the device firmware (LCOS) is available in the file LCOS-Licenses.txt on the data medium supplied.

Hardware	
Power supply	12 V DC, external power adapter (110 or 230 V) with bayonet connector to secure against disconnection
Power consumption	Approx. 4.5 W via 12V/1A power adapter (value refers to the overall power for the access point and power adapter), approx. 5.1 W via PoE
Environment	Temperature range 0–45 °C; humidity 0–95 %; non-condensing
Housing	Robust synthetic housing, rear connectors, ready for wall mounting, Kensington lock; measures 210 x 45 x 140 mm (W x H x D)
Number of fans	None; fanless design, no rotating parts, high MTBF
WLAN	
Frequency band	2,400–2,483.5 MHz (ISM) or 5,150–5,825 MHz (restrictions vary between countries)
Radio channels 2.4 GHz	Up to 13 channels, max. 3 non-overlapping (2.4-GHz band)
Radio channels 5 GHz	Up to 26 non-overlapping channels (channels available vary according to country regulations; DFS for automatic dynamic channel selection required)
Interfaces	
ETH	10/100/1000 Base-TX, autosensing, auto node hub, PoE compliant with IEEE 802.3af
DSL over LAN (DSLolL)	The LAN port can (even parallel to LAN mode) be used as a WAN port for connecting external DSL modems (PPPoE) or external routers.
External antenna connectors	Two reverse SMA connectors for external LANCOM AirLancer Extender antennas or for antennas from other vendors. US version: Antennas not part of the delivery content are a strict violation of FCC rules and must not be used.
Serial interface	Serial configuration interface / COM port (8-pin Mini-DIN): 9,600–115,000 baud
Declaration of conformity	
For the declaration of conformity, see the product page on our website <a href="http://www.lancom-systems.eu">www.lancom-systems.eu</a>	
Package content	
Manual	Quick Installation Guide (DE/EN/FR/ES/IT/PT/NL), FCC leaflet (US version only)
CD/DVD	CD/DVD with firmware, management software (LANconfig, LANmonitor, LANCAPI) and documentation
Cable	Ethernet cable, 3 m (LAN: kiwi-colored connectors; WAN: green connectors)
Antennas	Two 3-dBi dipole dual-band antennas
Power adapter	External power adapter, NEST 12V/1.5A DC/IS, barrel connector 2.1/5.5 mm bayonet, LANCOM item no. 110723 (EU, 230 V), LANCOM item no. 110829 (UK, 230 V), LANCOM item no. 111007 (US, 110 V)

LANCOM, LANCOM Systems and LCOS are registered trademarks. All other names or descriptions used may be trademarks or registered trademarks of their owners. Subject to change without notice. No liability for technical errors and/or omissions. 111017R2/0914

TECHNICAL DATA