


LANCOM OAP-1700B

LANCOM OAP-1702B


Quick Reference Guide

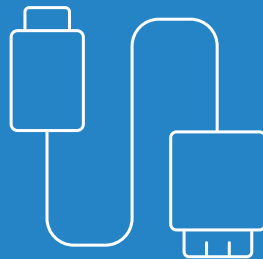

LANCOM
Systems

SECURE. NETWORKS.

Mounting

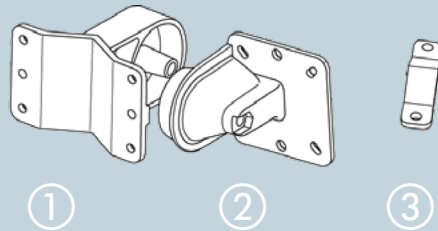


Screw the connector flange ② to the back of the housing with the four screws and their washers.

When fastening the clamp profile ③, please pay attention to tighten the screws equally with a maximum torque of 7 Nm!

Wall mounting

Use the mounting arm ① as a template. Fix the mounting arm to the wall with the supplied screws and dowling plugs.


Attach the access point with the connector flange ② to the mounting arm ①. Use the M8 x 110 bolt with spring locking washer, washer and nut.

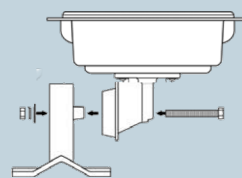

The main beam direction of the integrated antenna can be adjusted by tilting the access point up or down by rotating the connection flange about the mounting arm.

Pole mounting

Place the clamp profile ③ around the pole. Screw the clamp profile onto the mounting arm with the supplied screws.

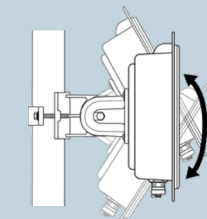



Installing access points and/or external antennas without adequate lightning protection can lead to serious damage to the devices and/or to the related network infrastructure.

- ④ **Wi-Fi antenna interfaces (only OAP-1702B)**
For the WLAN1 module, screw the supplied WLAN antennas to the connectors WLAN1 Ant1 and WLAN1 Ant2. The antenna ports for WLAN2 are located on the back of the device.
- ⑤ **ETH1 (PoE), ETH2 interfaces**
The ETH1 (PoE) connector also supplies power to the device. Plug in the water-proof power cable to the ETH1 (PoE) port and carefully tighten the threaded connector. Connect the other end of the network cable to the „Power Out“ connector ⑩ of the supplied PoE injector. Connect the interface ETH 2 with a sealed Ethernet cable to your PC or a LAN switch.
- ⑥ **Reset button (part of the LED block)**
To restore the device to its default configuration, keep the reset button on the device pressed until the LEDs on the device go out. The following automatic restart restores the default configuration to the device.
- ⑦ **Grounding**
Screw one end of the green/yellow grounding wire to the housing and attach the other end to a suitable ground.
- ⑧ **PoE injector - ⑧ LAN-In / ⑩ Power-Out / ⑨ Power supply interfaces**
Using Ethernet cables, connect the „LAN-In“ interface ⑧ of the provided PoE injector to a free socket of your local network and the „Power-Out“ interface ⑩ to the ETH1 (PoE) interface of the access point. Supply power to the PoE injector ⑨. Only use the supplied PoE Injector to supply power to this device. Particularly, do not connect the PoE Injector to non-PoE Ethernet devices!
- ⑪ **Wi-Fi antenna interfaces at the rear side (only OAP-1702B)**
The following Wi-Fi antenna interfaces are located at the rear side of the device: WLAN1 - Ant1, WLAN2 - Ant1-4
- ⑫ **BLE antenna interface at the rear side (only OAP-1702B)**
Attach the provided BLE antenna to the BLE interface.



The housing of the device may become warm during operation. If the device is operated with outside temperatures exceeding 60 °C, it should be mounted with protection against contact. When operating both Wi-Fi modules in the same frequency band, mutual interference cannot be ruled out.

Before initial startup, please make sure to take notice of the information regarding the intended use in the enclosed installation guide! Operate the device only with a professionally installed power supply at a nearby power socket that is freely accessible at all times.

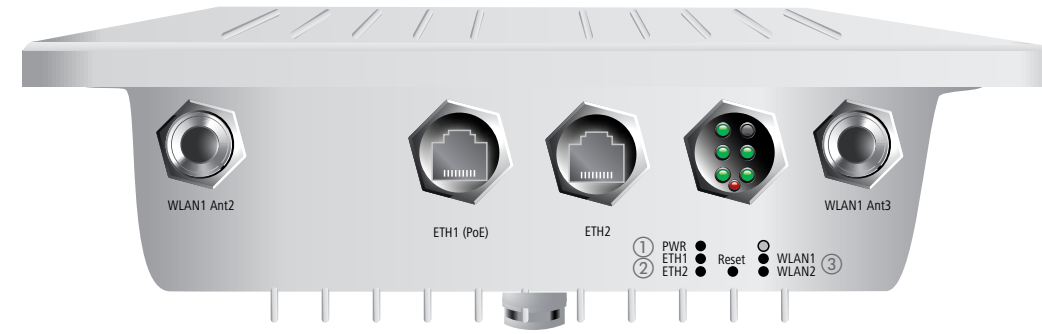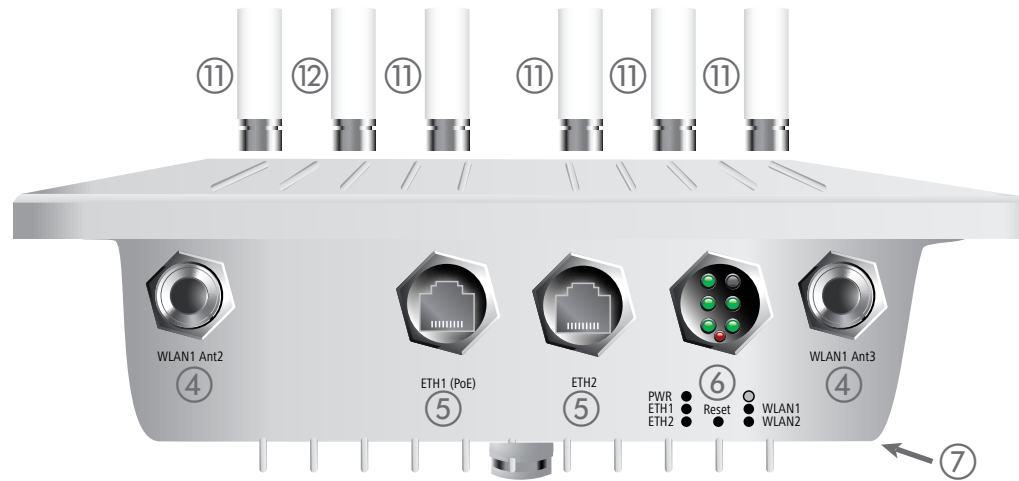

① PWR

| | |
|----------------------------|--|
| Off | Device switched off |
| Green, permanently* | Device operational, resp. device paired / claimed and LANCOM Management Cloud (LMC) accessible |
| Green, blinking | Configuration password not set. Without a configuration password, the configuration data in the device is unprotected. |
| 1x green inverse blinking* | Connection to the LMC active, pairing OK, device not claimed |
| 2x green inverse blinking* | Pairing error, resp. LMC activation code not available |
| 3x green inverse blinking* | LMC not accessible, resp. communication error |

② ETH1 / ETH2

| | |
|--------------------|---|
| Off | No networking device attached |
| Green, permanently | Connection to network device operational, no data traffic |
| Green, flickering | Data traffic |

③ WLAN1 / WLAN2

| | |
|-------------------------|---|
| Off | No Wi-Fi network defined or Wi-Fi module deactivated. The Wi-Fi module is not transmitting beacons. |
| Green | At least one Wi-Fi network is defined and Wi-Fi module activated. The Wi-Fi module is transmitting beacons. |
| Green, flashing inverse | Number of flashes = number of connected Wi-Fi stations and P2P wireless connections, followed by a pause (default). Alternatively the frequency of the flashing can indicate signal strength over the defined P2P link or the signal strength between the access point and the device operating in client mode. |
| Green, blinking | DFS scanning or other scan procedure |

*) The additional power LED statuses are displayed in 5-seconds rotation if the device is configured to be managed by the LANCOM Management Cloud.

| Hardware | |
|---|--|
| Power supply | Via Power-over-Ethernet compliant to IEEE 802.3at |
| Power consumption | PoE: 15.1 W (measured at the PoE injector) |
| Environment | -33 °C to +70 °C |
| Housing | Robust metal housing, protection class IP 67, for wall and pole mounting. Note: For installation in salt water environments please use a suitable outer housing. Dimensions 255 x 250 x 70 mm (length/width/depth) |
| Wi-Fi | |
| Frequency bands | 2.4 GHz or 5 GHz, 2400-2483.5 MHz (ISM) or 5150-5825 MHz (restrictions vary between countries) |
| Antenna gain (only OAP-1700B) | Up to 8.1 dBi at 5 GHz, up to 8.0 dBi at 2.4 GHz, and up to 5.0 dBi at Bluetooth |
| Minimum transmission power | Transmission-power reduction in software by 1 dB steps to min. 0.5 dBm |
| Radio channels 2.4 GHz | Up to 13 channels, max. 3 non-overlapping (2.4-GHz band) |
| Radio channels 5 GHz | Up to 26 non-overlapping channels (channels available vary according to country regulations; DFS for automatic dynamic channel selection required) |
| Bluetooth Low Energy | iBeacon: The device can broadcast a configurable iBeacon. Scanner: The device can capture neighborhood BLE devices and transmit data to external systems for evaluation. |
| Interfaces | |
| ETH1 (PoE) | 10 / 100 / 1000 Mbps auto-sensing, PoE as per IEEE 802.3af |
| ETH2 | 10 / 100 / 1000 Mbps, preconfigured LAN port, re-configurable to WAN port |
| External antenna connectors (only OAP-1702B) | Wi-Fi: 7 N1 connectors (3 for 2.4 GHz Wi-Fi module, 4 for 5 GHz Wi-Fi module), BLE: 1 N1 connector |
| Declaration of conformity | |
| Hereby, LANCOM Systems GmbH Adenauerstrasse 20/B2 D-52146 Wuerstelen, declares that this radio equipment is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: www.lancom-systems.com/ce/ | |
| Package content | |
| Cables | Water-resistant, UV-resistant Ethernet cable with screw connector, 15 m |
| Documentation | Quick Reference Guide (DE/EN), Installation Guide (DE/EN) |
| External antennas (only OAP-1702B) | Eight 3 dBi dipole dualband Wi-Fi antennas |
| Mounting kit | Equipment for wall and pole mounting, screws included |
| Covering cap | Ensures that the unit remains sealed in case an Ethernet port is unused |
| PoE injector | Gigabit Ethernet PoE injector (IEEE 802.3at) |
| Grounding cable | To avoid electrostatic charge |

LANCOM, LANCOM Systems, LCOM, LANcommunity and Hyper Integration are registered trademarks. All other names or descriptions used may be trademarks or registered trademarks of their owners. This document contains statements relating to future products and their attributes. LANCOM Systems reserves the right to change these without notice. No liability for technical errors and/or omissions. 1118530 120